


iKleen2 Remote Control

User Instructions

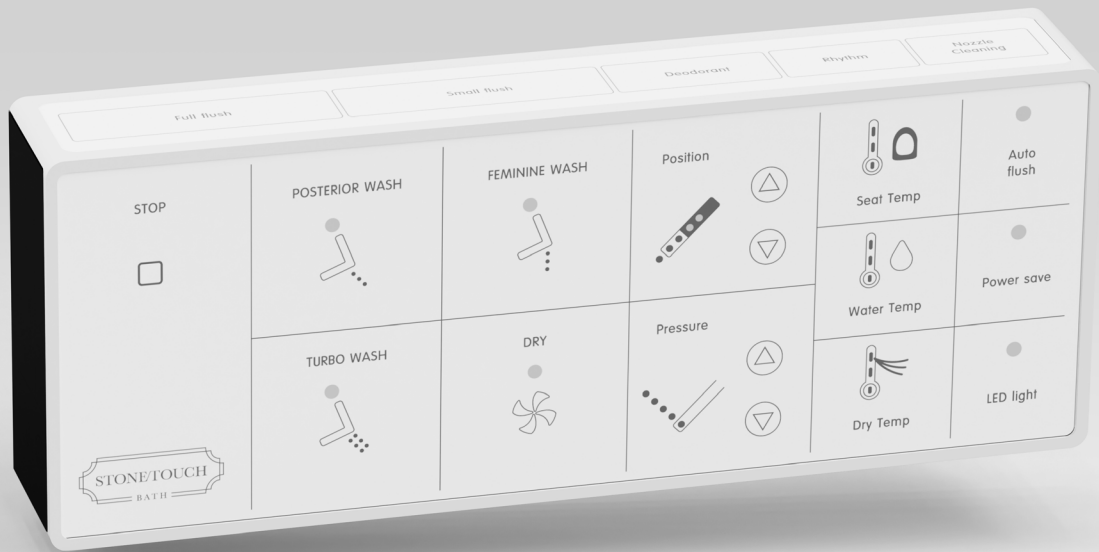

Flush (full, small) button

Activates the full or small flush.

Feminine Wash

Activates the feminine intimacy spray nozzle

Rhythm ON / OFF

Press the 'Rhythm' button during the Posterior Wash or Feminine Wash function. The nozzle will oscillate to cover a wider area and provide a pulsating massage effect by adjusting the water pressure.

Nozzle Cleaning

Moves the nozzle forward for easy cleaning.

Stop – Press the STOP button to halt the current function in use.

Posterior Wash



Activates the posterior wash cycle.

Feminine Wash



Activates the feminine intimacy wash cycle.

Position



Adjusts the nozzle to your comfort position (5 settings)

Seat Temp



Adjusts the seat temperature (3 settings).

Auto Flush ON/OFF

Activates the auto-flush function. Distinguishes urine and feces

Turbo Wash



Activates the powerful water spray function.

Dry



Activates the dry function after any wash cycle.

Pressure



Adjusts the water pressure to your confort level for any wash cycle.

Water Temp



Adjusts the water temperature for any of the water cycles.

Power saving ON /OFF

Activates the power saving mode.

Dry Temp



Adjusts the drying temperature (3 settings).

Lighting ON/OFF

Activates the automatic LED light function inside the toilet bowl. Can be used as a night light.

