


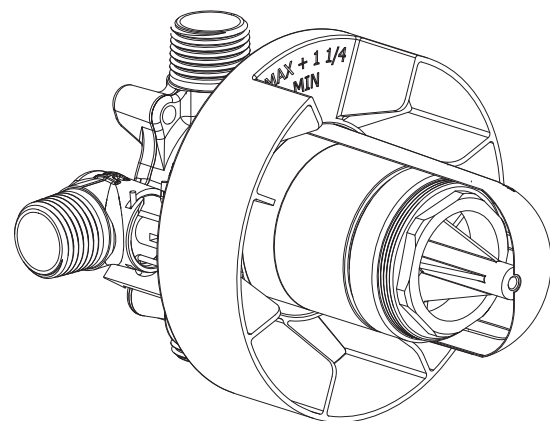

Before beginning the installation:

Read all instructions.
Purge the water supply system before connecting it to the faucet.

Avant de commencer l'installation:

Lire toutes les instructions.
Purger votre système d'alimentation d'eau avant d'effectuer le branchement au robinet.

Antes de iniciar la instalación:

Lea todas las instrucciones.
Es necesario purgar previamente su sistema de alimentación de agua para efectuar la conexión del grifo.

Tools and equipment required / Outils et matériel requis / Herramientas y material requerido para instalación:



WHITE
BLANC
BLANCO

**STANDARD WALL
MUR STANDARD
PARED ESTÁNDA**

FINISHED WALL
MUR FINI
PARED TERMINADA

Ø3 7/8
[100mm]

TEMPLATE
GABARIT
PLANTILLA

2 to 3 1/4
[50 mm to 82 mm]

WALL REINFORCEMENT SUPPORT
* SUPPORT DE BOIS MURAL
REFUERZO DE SOPORTE DE PARED



**ACRYLIC WALL
MUR EN ACRYLIQUE
PARED DE ACRÍLICO**

BACK PLATE FOR TRIM
PLAQUE D'ASSEMBLAGE DE LA FINITION
PLACA PARA EL MONTAJE DE ACABADO


Ø3 1/2
[89 mm]

ACRYLIC WALL
MUR EN ACRYLIQUE
PARED DE ACRÍLICO


TEMPLATE
GABARIT
PLANTILLA

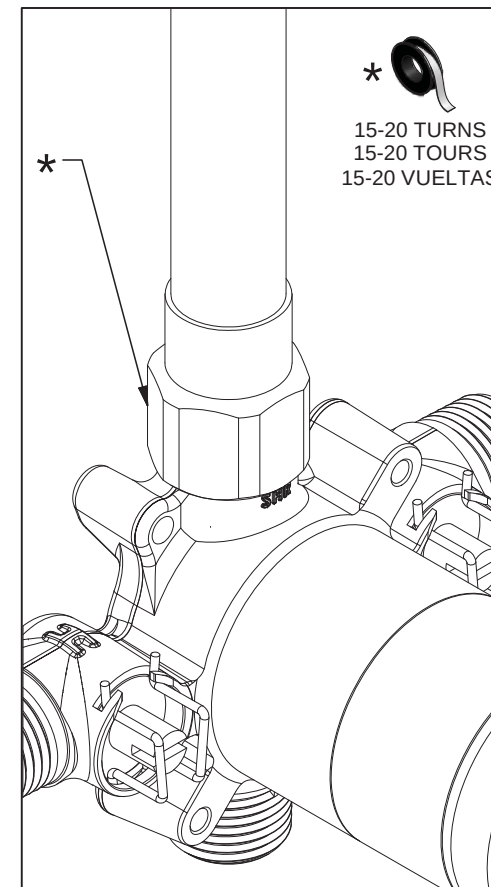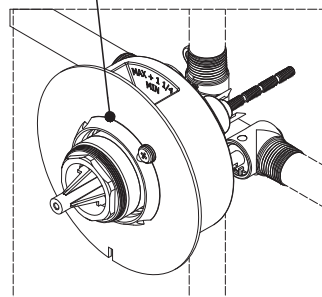


INSTALLATION MALE NPT
INSTALLATION MÂLE NPT
INSTALACION MACHO NPT

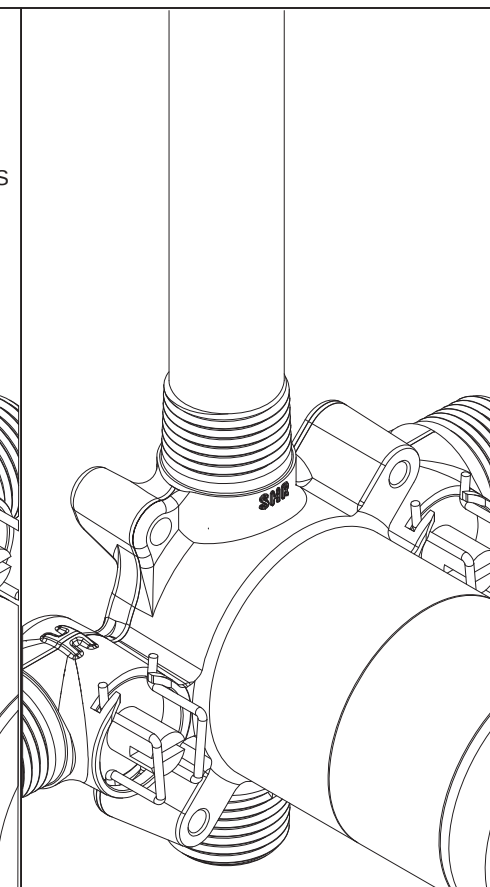

WELDING INSTALLATION
INSTALLATION SOUDÉE
INSTALACION CON SOLDADURA

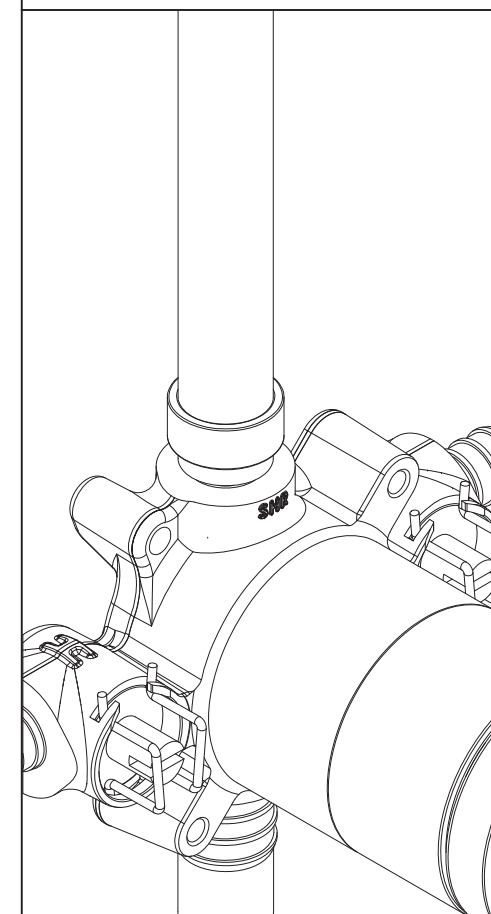

INSTALLATION SPEX
INSTALACION SPEX

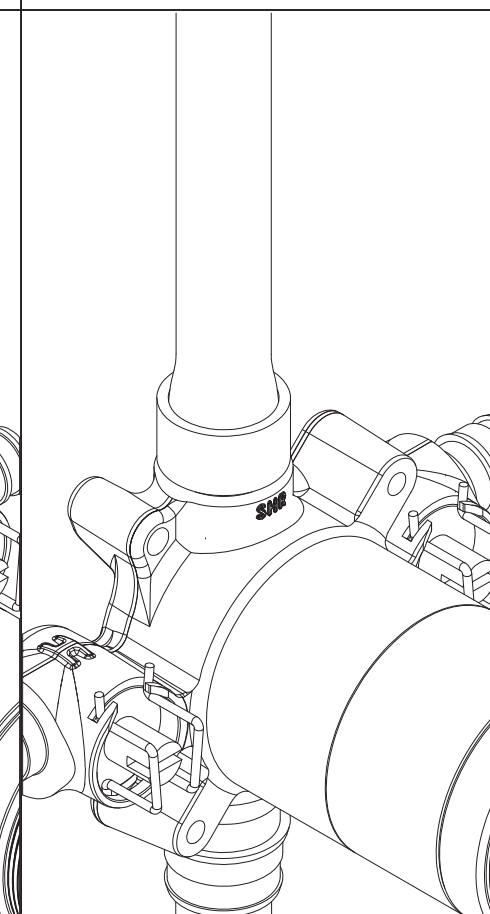

INSTALLATION EX
INSTALACION EX

