




INSTALLATION GUIDE
GUIDE D'INSTALLATION

iKLEEN 2

tankless elongated smart toilet
toilette allongée intelligente sans réservoir

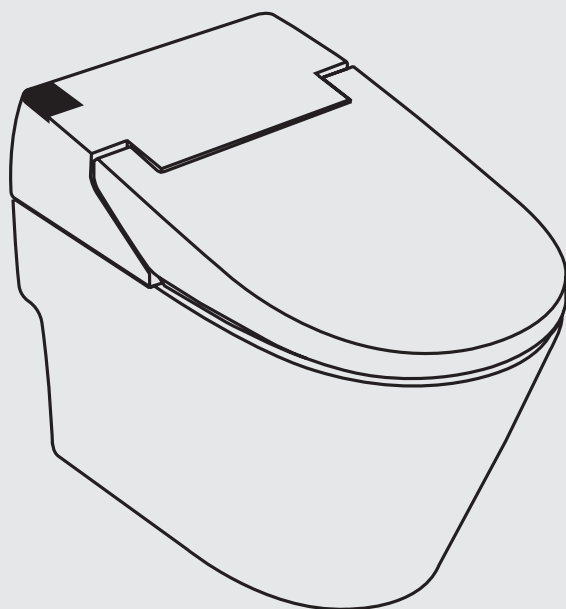

USER MANUAL MANUEL DE L'UTILISATEUR


THANK YOU for purchasing one of our STONETOUCH BATH products. You are a few steps away from enhancing your decor and living the STONETOUCH BATH experience.

Don't forget to **register** your product at www.stonetouchbath.com to facilitate all future requests and communications.

MERCI d'avoir fait l'achat de l'un de nos produits STONETOUCH BATH. En quelques étapes, votre décor sera transformé et vous pourrez apprécier l'expérience STONETOUCH BATH.

N'oubliez pas d'**enregistrer** votre produit à www.stonetouchbath.com afin de simplifier toutes demandes ou communications ultérieures.

NEED MORE INFO? / BESOIN DE PLUS D'INFOS ?

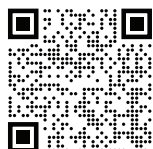

PLEASE VISIT www.stonetouchbath.com for information on:

VEUILLEZ VISITER www.stonetouchbath.com pour de l'information sur :



Detailed specification sheets
& installation guides

Spécifications techniques et
guides d'installation détaillés



Maintenance & care
Entretien



Complete warranty
information
Informations détaillées
sur la garantie

GENERAL CONSIDERATIONS CONSIDÉRATIONS GÉNÉRALES

BEFORE STARTING

Observe all local building codes.

The following instructions are intended for qualified personnel with the technical background and experience needed to manage the product safely.

This smart toilet should only be used in a domestic-type of environment.

STONE TOUCH BATH shall not be held responsible and the warranty shall no longer be valid in case of improper use.

OPEN THE PACKAGE AND INSPECT THE SMART TOILET

Unpack the smart toilet and inspect it for damage.

AVANT DE COMMENCER

Respecter tous les codes de construction applicables.

Les indications suivantes sont adressées à un personnel qualifié ayant les compétences techniques et l'expérience nécessaires lui permettant de manipuler le produit en toute sécurité.

Cette toilette intelligente doit être utilisée exclusivement dans un contexte de type résidentiel.

Le fabricant décline toute responsabilité en cas d'utilisation impropre du produit qui annulera toute forme de garantie.

OUVRIR L'EMBALLAGE ET S'ASSURER QUE LA TOILETTE INTELLIGENTE NE SOIT PAS ENDOMMAGÉE

Déballer et contrôler le toilette intelligente afin de vérifier qu'il n'ait pas été endommagé pendant le transport.

SPECIFICATIONS

SPÉCIFICATIONS


	Model	STTOIKL02A WH
	Rated Voltage	120 V, 60 Hz
	Rated Power Consumption	703 W
	Power Cord Length	1,2 m (4 ft)
Toilet	Water Consumption	Full flush: 6 ℓ / Small flush: 4 ℓ
	Flushing System	Siphon water jet, Tornado flushing
Wash Unit	Posterior Wash	Max 1,2 ℓ / min
	Feminine Wash	Max 1,2 ℓ / min
	Turbo Wash (Enema)	Max 1,2 ℓ / min
	Water Temperature	Adjustable. Temperature 34°C ~ 40°C
	Water Tank	1200 cc
	Heater Capacity	600 W
Heated Seat	Safety Device	Thermal cutoff, Overheating prevention circuit, Temperature sensor
	Seat Temperature	Adjustable. Temperature 34°C ~ 40°C
	Heater Capacity	55 W
	Safety Device	Thermal cutoff, Temperature sensor
Dry	Hot Air Temperature	Adjustable. Temperature 40°C ~ 59°C
	Heater Capacity	250 W
	Safety Device	Thermal cutoff, Temperature overheat preventer (manual recovery bimetal)
	Odor Control	Automatic deodorizer
	Lighting	Auto light ON/OFF
	Auto Lid	-
	Water Pressure	Min: 1,5 kgf/cm ² (0,15 MPa) [with 20 ℓ/min flow] Max: 7,5 kgf/cm ² (0,75 MPa)
	Inlet Water Temperature	5°C ~ 35°C
	Ambient Temperature	5°C ~ 40°C
	Dimension	W 15.5" x L 26.4" x H 21.46" W 395 mm x L 670 mm x H 545 mm
	Weight	81.6 lbs / 37 kg

SPECIFICATIONS

SPÉCIFICATIONS

	Modèle	STTOIKLO2A WH
	Tension nominale	120 V, 60 Hz
	Consommation électrique nominale	703 W
	Longueur du cordon d'alimentation	1,2 m (4 pi)
Toilette	Consommation d'eau	Pleine chasse : 6 l / Chasse réduite : 4 l
	Chasse d'eau	Siphon water jet, Tornado flushing
Dispositif de lavage	Lavage postérieur	Max. 1,2 l / min
	Lavage féminin	Max 1,2 l / min
	Turbo Wash (Lavage postérieur)	Max. 1,2 l / min
	Température de l'eau	Température réglable 34°C ~ 40°C
	Réservoir d'eau	1200 cc
	Capacité de chauffage	600 W
	Dispositif de sécurité	Coupure thermique, circuit de prévention de la surchauffe, capteur de température
Siège chauffant	Température du siège	Température réglable 34°C ~ 40°C
	Capacité de chauffage	55 W
	Dispositif de sécurité	Coupure thermique, capteur de température
Séchage	Température de l'air chaud	Température réglable 40°C ~ 59°C
	Capacité de chauffage	250 W
	Dispositif de sécurité	Coupure thermique, prévention de la surchauffe (élément thermique bimétallique de récupération manuelle)
	Contrôle des odeurs	Désodorisation automatique
	Éclairage	Éclairage automatique ON/OFF
	Couvercle automatique	-
	Pression de l'eau	Min. : 1,5 kgf/cm ² (0,15 MPa) [au débit de 20 l/min] Max. : 7,5 kgf/cm ² (0,75 MPa)
	Température de l'eau d'entrée	5°C ~ 35°C
	Température ambiante	5°C ~ 40°C
	Dimensions	Larg. 15.5" x Long. 26.4" x H 21.46" Larg. 395 mm x Long. 670 mm x H 545 mm
	Poids	81.6 lbs / 37 kg

PART LIST
LISTE DES PIÈCES

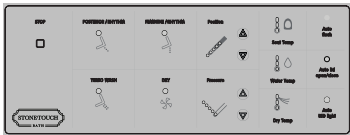


Remote control
Télécommande



Wax Ring
Bague en cire



Wallmount bracket
Support mural




AA Batteries (x3)
Piles AA (x3)




Screws (x2) /
Vis (x2)



Anchors (x2)
Chevilles (x2)




Water hose
Flexibles d'eau




Ring Plate
Rosace ronde



Water Pipe
Tuyau

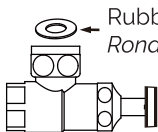


Rubber washer
Rondelle en caoutchouc
Shutoff Valve
Valve d'arrêt



Water Filter
Filtre à eau

GENERAL DIMENSIONS DIMENSIONS GÉNÉRALES

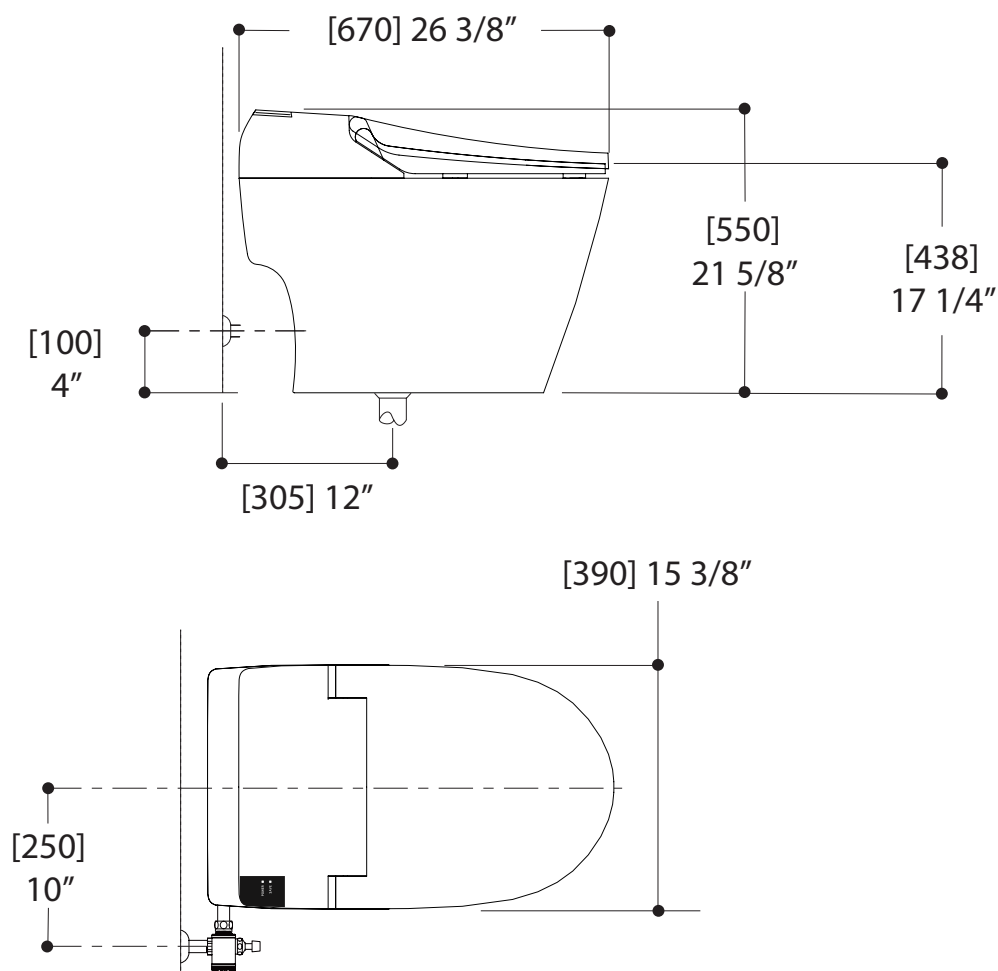

CAUTION




Always inspect the product prior to installation.



ATTENTION

Toujours inspecter le produit avant de procéder à l'installation.

INSTALLATION STEPS ÉTAPES D'INSTALLATION

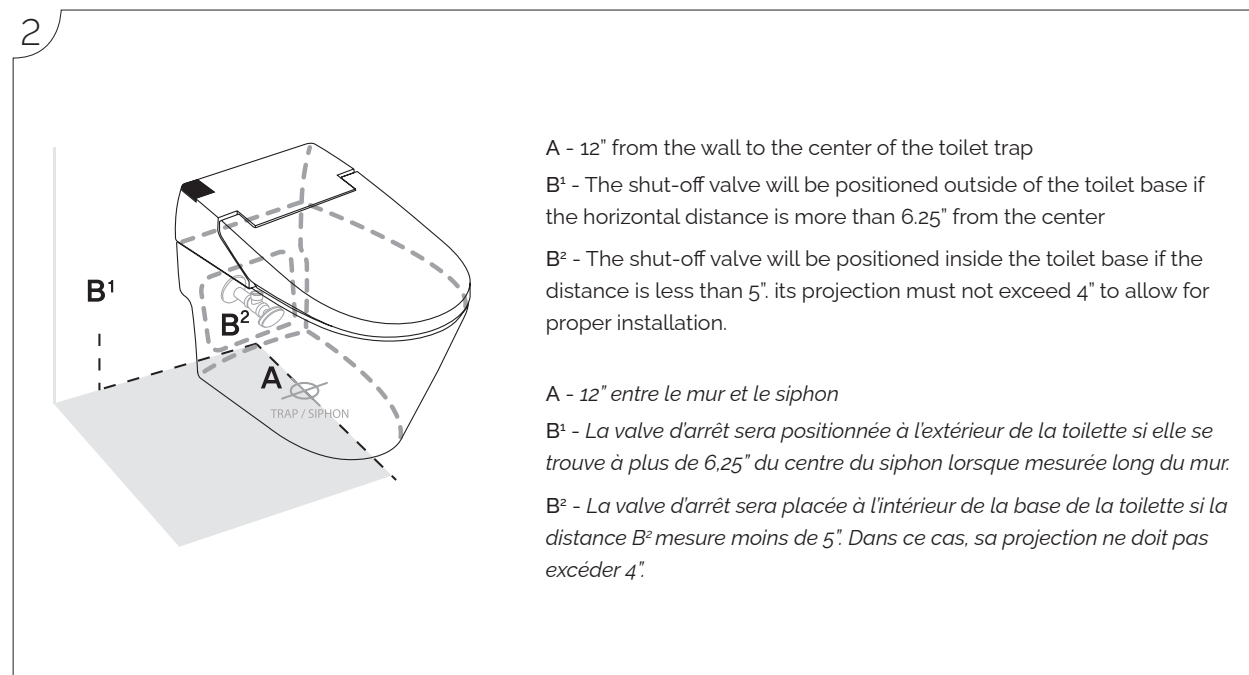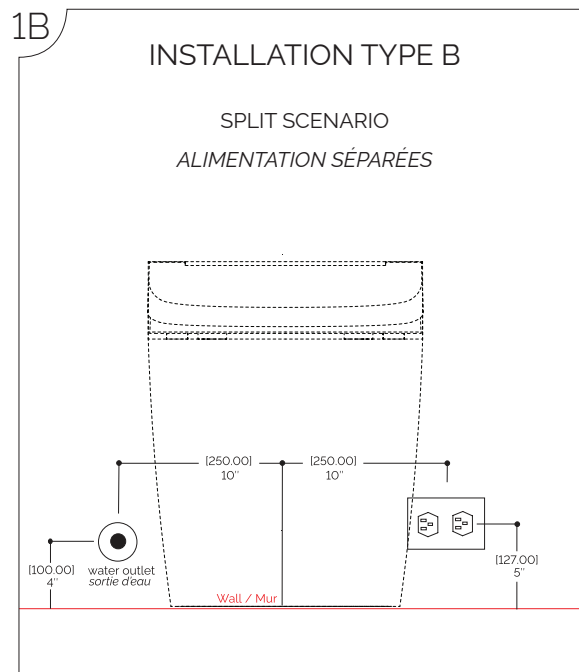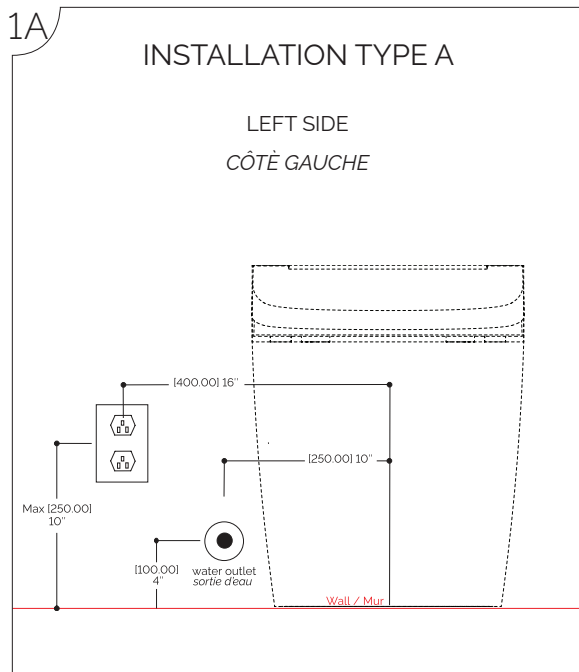


INSTALLATION STEPS ÉTAPES D'INSTALLATION

3


INSTALLATION

RECOMMENDED WITH WATER FILTER


RECOMMANDÉ AVEC FILTRE À EAU

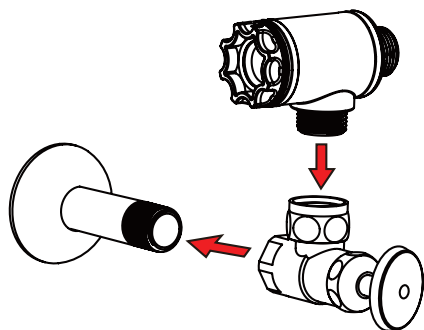



4

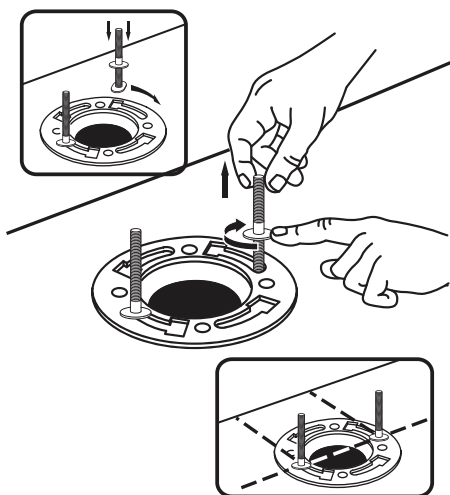

5

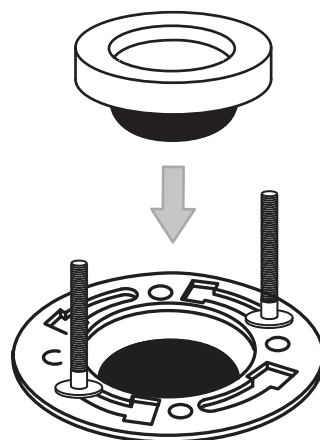

INSTALLATION STEPS ÉTAPES D'INSTALLATION

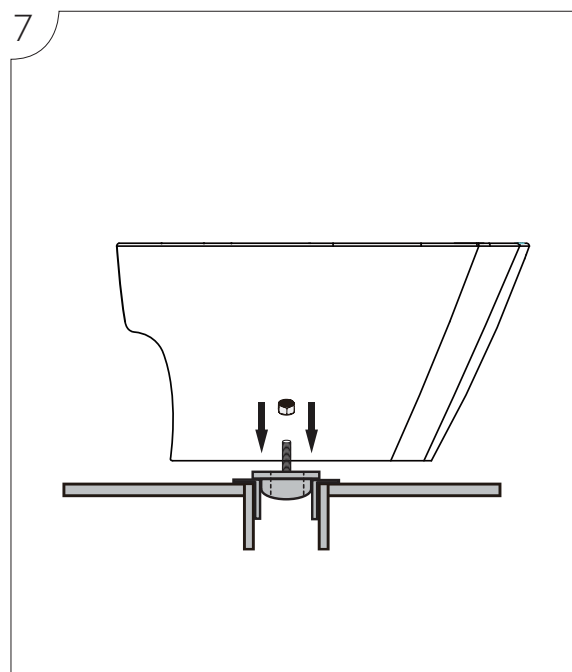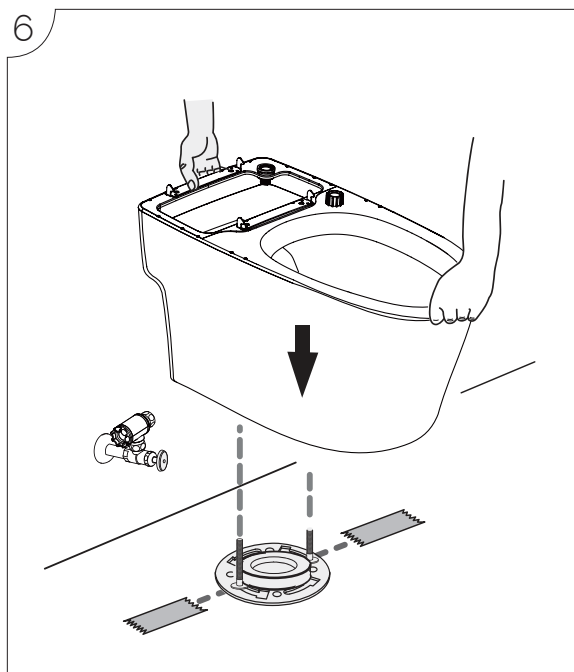

8

SEAT INSTALLATION INSTALLATION DU SIÈGE

1

Hose nut
Écrou de flexible

2

Flushing adapter
Adaptateur de chasse d'eau


Completely insert the male nozzle into the flushing adaptor then manually thread the hose nut all the way up. Do not over tighten.

*Insérer complètement l'embout mâle dans l'adaptateur, puis enfiler manuellement l'écrou de flexible jusqu'au bout.
Ne pas trop serrer.*

INSTALLATION STEPS ÉTAPES D'INSTALLATION

9

- Fixing hooks
Crochets de fixation
- Bowl washing outlet
Sortie d'eau pour nettoyage
- Jet spray outlet
Buse du jet de pulvérisation

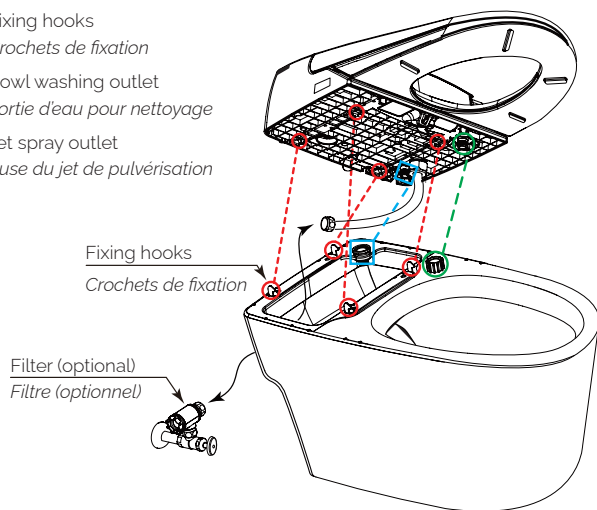

Feed the water hose through the back of the toilet base and lock the seat in place paying close attention to the alignment of the different components. Connect hose to water supply.


Faire passer le tuyau d'eau par l'arrière de la base de toilette et verrouiller le siège en place en portant une attention particulière à l'alignement des différents composants. Raccorder le tuyau à l'alimentation d'eau.

10



Screw or use double-face tape
Visser ou utiliser un ruban adhésif double face


11

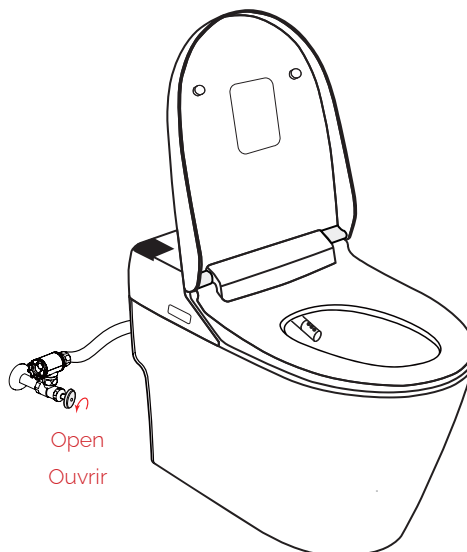

INSTALLATION STEPS
ÉTAPES D'INSTALLATION

12

1

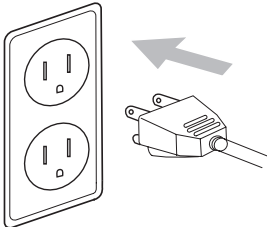

2

Full flush


Small flush



Press the full flush button

Appuyer sur le bouton de chasse complète

13

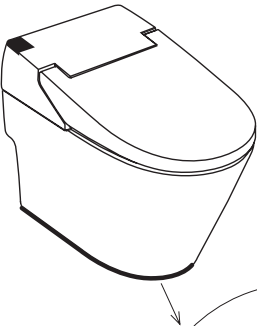

Close up (side view)

Détail (vue de côté)





Surface of toilet

Surface de la toilette




Silicon / Silicone

Floor / Sol

HOW TO REMOVE THE SEAT COMMENT RETIRER LE SIÈGE

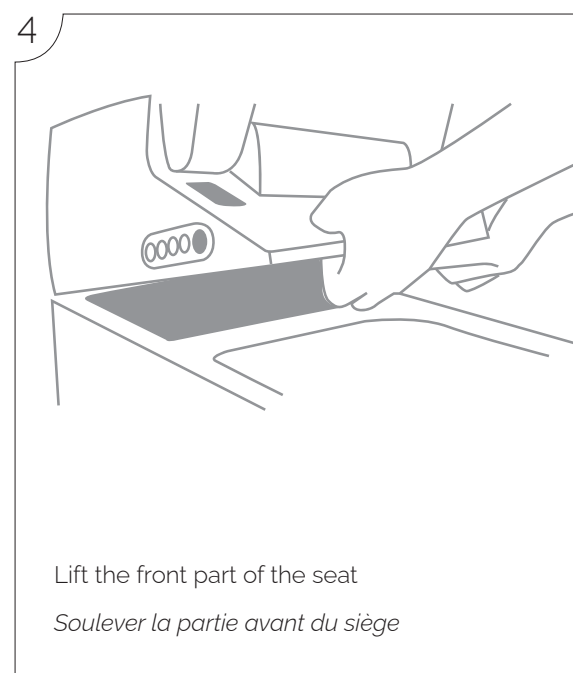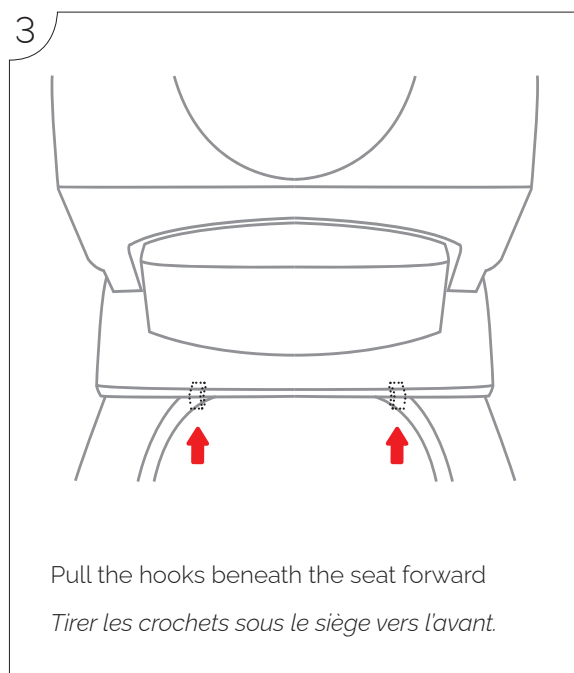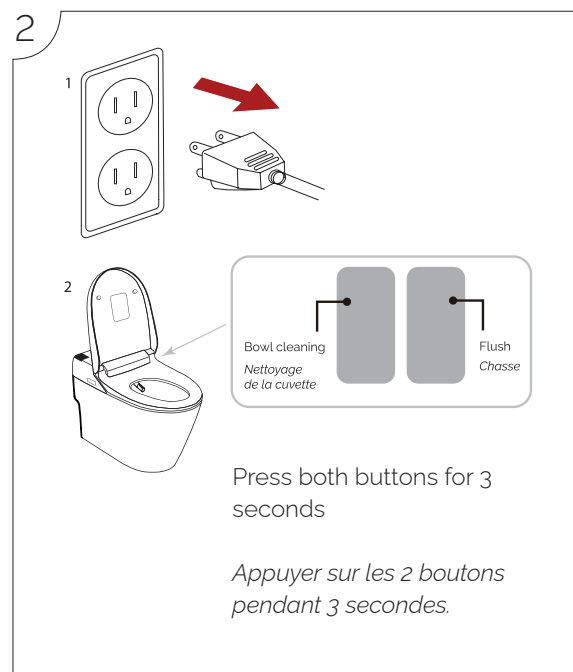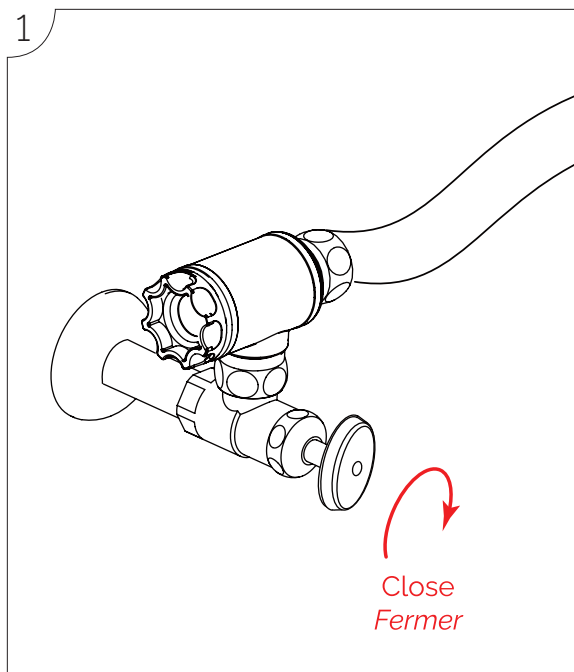


HOW TO REMOVE THE SEAT COMMENT RETIRER LE SIÈGE

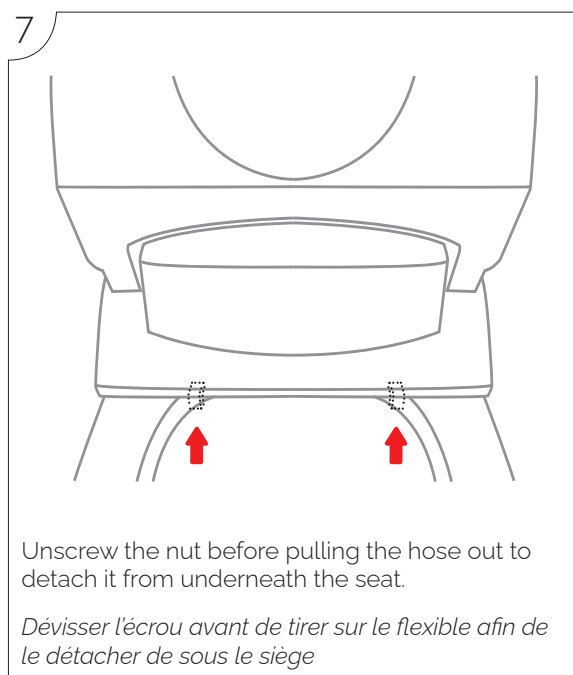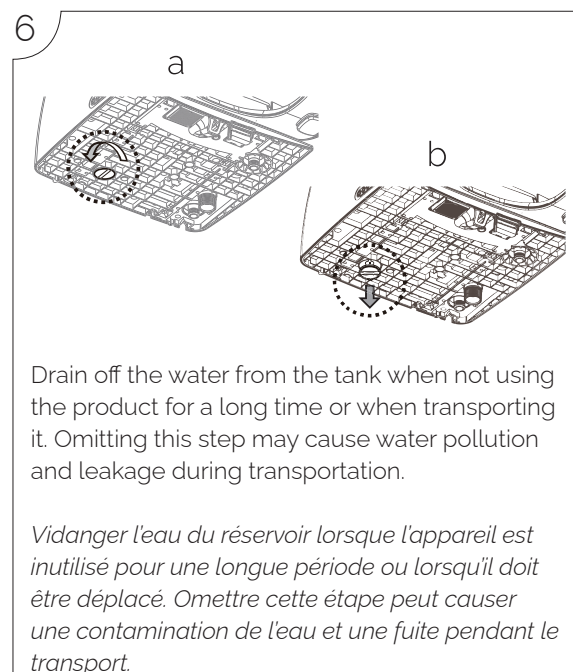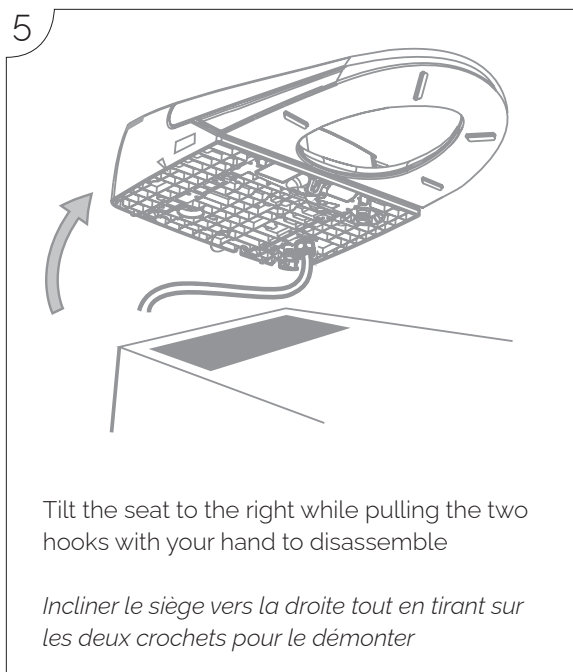

REMOTE CONTROL

TÉLÉCOMMANDE

< TOP >



Flush (Full Small) Button

-Press the flush button to activate the full or small flush.

Pulsating

-Press the pulsating button to repeat the intensity of the water pressure from strong to weak.

Auto Deodorant ON / OFF

-Press the deodorant button to remove the odor inside the bowl.

Nozzle Cleaning

-Press the nozzle cleaning button to clean the nozzle in a moving forward position.

< Front >

Stop


-To stop the function being used, press the STOP button

Posterior / Rhythm

-Performs Posterior wash (Back area of the body) by pushing the button once.
-Performs Rhythm function when pushed the button again while the posterior function is on the process.
-During Rhythm function, the nozzle will move to wash wide area and provide pulsating massage effect with changing water pressure.

Feminine / Rhythm

-Performs Feminine wash (Frontal area of the body) by pushing the button once.
-Performs Rhythm function when pushed the button again while the feminine function is on the process.
-During Rhythm function, the nozzle will move to wash wide area and provide pulsating massage effect with changing water pressure.

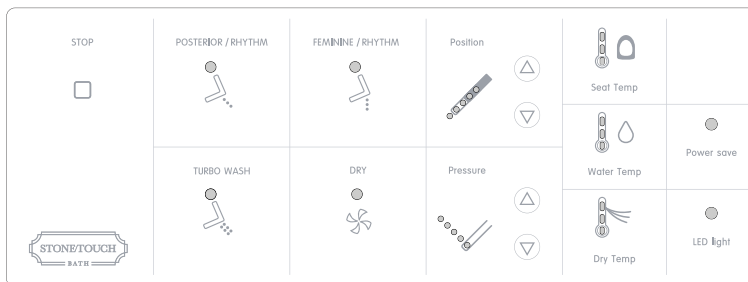

Position

-The nozzle position can be adjusted in five steps.

Turbo Wash (Enema)

-Press the Turbo Wash button to activate washing water spray from the nozzle.

Pressure

-It is possible to adjust the water pressure of Posterior wash, Feminine wash, and Turbowash in five steps.

Power Save On / Off

-In power save mode, water temperature and seat temperature will be adjusted efficiently when not used for more than one hour.

-When the product is used again, the temperature returns back to the original setting.

Seat Temp

-The toilet seat temperature button can adjust the temperature of the toilet seat in three steps.

Dry

-Dry off the water after using the posterior Wash, Feminine Wash, and Turbo Wash function.

Water Temp

-It is possible to adjust the water temperature of Posterior wash, Feminine wash, and Turbo wash in three steps.

Lighting ON / OFF

-The light is turned on in the bottom ceramic, you can turn the lighting function ON / OFF so that you can use the bathroom in the dark without any lights.

Dry Temp

-The temperature of the drying function can be adjusted in three steps.

USER MANUAL

MANUEL D'UTILISATION

How to use

1 Sit on the seat

- The seat lamp will turn on.
- It operates after being occupied.

2 Press the flush button on the remote control

- Only needs to be done after the first time of installation
- Water will fill the toilet to an appropriate level.

3 POSTERIOR WASH / FEMININE WASH / ENEMA

Press posterior  or Enema 
Press feminine  **Advice 1**

- It works for 1 minute

How to use "Enema" properly **Advice 2**

Press "Enema" , set the water spray to the center of anus

- Control the water pressure.
- If you feel that the water has filled you up, push the water out by forcing the abdomen

4 Press Stop

- Posterior, Feminine and Enema motion stops

5

Full flush

Small flush

Press Flush

6 Press Dry

- It works up to 3 minutes

7 Press Stop

How to use it more comfortably

Comfortable 1 Oscillating

Nozzle moves back and forth to cleanse.

Comfortable 1 Pulsating

Stream water more rhythmically.

Comfortable 1 Rhythm

Enjoy Oscillating and Pulsating all together.

1.   Press the button to wash
2. Press Oscillating button.
- Nozzle moves while washing.
3. Press Oscillating button again.
- Stop Oscillating.

1.   Press the button to wash
2. Press Pulsating button.
- Spray Pulsating while washing.
3. Press Pulsating button again.
- Stop Pulsating.

1.   Press the button to wash
2. Press Rhythm button.
- Spray water rhythmically.
3. Press Rhythm button again.
- Stop Rhythm.

Advice 1 Do not sit on the edge, but toward the inside of seat.

Advice 2 Comfortable functions don't work with Enema. Enema wash starts from the lowest water pressure.

USER MANUAL

MANUEL D'UTILISATION

Flushing


■ Remote control Toilet Flush

Press the button on the remote control.



When the batteries are running down

- Press the flush button on the control panel of main body

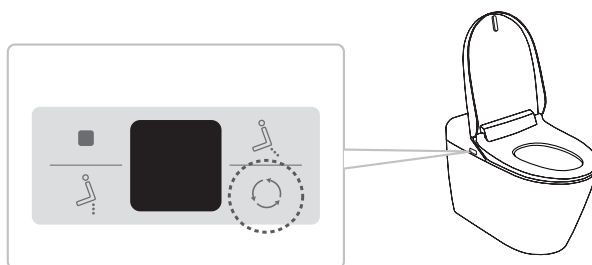


2. Press the Flush button for 5 seconds.

Cleaning the toilet when power is out

- Open the main body cover for toilet flushing.

1. Press the Bowl cleaning button for 3 seconds.
2. Press the Flush button for 5 seconds.
3. Press the Bowl cleaning button again for 3 seconds

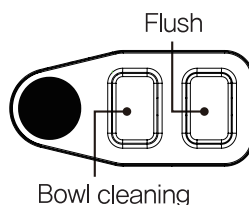

* Bowl cleaning function is to clean the inner ceramic bowl.

* Flush function is to jet high pressure water to flush down the soil in the bowl.

CARE ENTRETIEN

CARE AND MAINTENANCE

Taking care of this product is simple and quick. For everyday cleaning, use soapy water or a creamy detergent and a cloth or soft sponge. Common everyday bathroom non-abrasive cleaning products in spray, liquid, gel or cream forms are acceptable. Rinse well and clean regularly after use to prevent the accumulation of dirt or limescale.

SOIN ET ENTRETIEN

Prendre soin de ce produit est simple et rapide. Pour le nettoyage quotidien, utiliser de l'eau savonneuse, ou encore un nettoyant crémeux avec un chiffon ou une éponge souple. Les produits d'entretien communs pour salle de bain sont appropriés. Bien rincer et nettoyer régulièrement après l'utilisation pour éviter l'accumulation de saletés et de calcaire.



WARRANTY GARANTIE

LIMITED WARRANTY

StoneTouch Bath ("Manufacturer") warrants its products to be free from manufacturing defects in material and workmanship under normal use and service. The duration of this warranty varies depending on the type of application and usage. This warranty is extended only to the original purchaser at an authorized dealer and is not transferable. The original receipt must be available to exercise the warranty.

APPLICATION	Crystalplant® Bathtubs. White.	Crystalplant® Vanity tops, sinks and basins. White.	Shower Bases	Color finish on Crystalplant® bathtubs, vanity tops, sinks and basins.	Furniture and Accessories.	Toilet Seat and Electronics.	Porcelain toilet, vanity tops and sinks.
Residential*	25 years	10 years	5 years	2 years	2 years	1 year	5 years
Commercial	5 years	2 years	2 years	2 years	1 year	1 year	2 years

*Also valid for multi-family residential applications.

This warranty is valid and subject to the following conditions:

- Valid from the time the product was delivered.
- Proper installation was performed appropriately with leveled floors.
- Pre-installation product inspection.
- Installation checked for water leaks and proper drainage.
- Product maintenance and cleaning as per provided instructions.

WARRANTY EXCLUSIONS

The warranty is not valid whenever:

- The installation of any StoneTouch products by a non-accredited professional.
- Instructions for use and installation reported herein are not observed.
- A warped or faulty product is installed without the mandatory prior inspection.
- Damages are caused by disasters, such as fires, natural disasters, including floods, earthquakes etc.
- Product is changed or customized by the installer or the user without manufacturer's authorization.
- Accidental damages occur due to collisions or improper use.
- Damage or loss resulting from any accident, unreasonable use, misuse, abuse, negligence, or improper care, cleaning, or maintenance of the Product.
- Damage or loss resulting from sediments or foreign matter contained in a water system.
- Damage or loss resulting from electrical surges or lightning strikes or other acts which the Product is not specified to tolerate.
- Damage or loss resulting from normal and customary wear and tear, such as gloss reduction, scratching or fading over time due to use, cleaning practices, water or atmospheric condition, including but not limited to, the use of bleach, alkali, acid cleaners, dry (powder) cleaners or any other abrasive cleaners or the use of metal or nylon scrubbers.
- The use of any Product in a manner inconsistent with the Product instructions / owners manual.

LIMITATIONS

This warranty does not cover labor and shipping charges, or damages incurred from installation, removal, re-installation, repair, or replacement of any StoneTouch Bath product or part. It also excludes any incidental or consequential damages, expenses, losses, direct or indirect, arising from any cause whatsoever.

This warranty is extended to the first purchaser at retail and is not transferable.

The original receipt must be available to exercise the warranty.

WARRANTY CLAIM PROCESS

Please submit the invoice/receipt along with installation instructions to the reference point of sale in case of a warranty claim. To exercise the warranty, a proof of purchase—such as a copy of invoice—must be made available to our distribution center.

Depending on the complexity of the defective product, an inspection can be required prior to approving the warranty claim. To obtain warranty service, please contact your local StoneTouch customer care. This warranty document is provided to outline the terms and conditions of the StoneTouch Bath product warranties. It is recommended to carefully read and understand these terms before making a purchase.

Note: This warranty does not affect the legal rights of the buyer.





WARRANTY GARANTIE

GARANTIE LIMITÉE

StoneTouch Bath (le "Fabricant") garantit ses produits contre les défauts de matériel et de main d'œuvre dans des conditions normales d'utilisation et d'entretien du produit. La durée de cette garantie varie en fonction du type d'application et d'utilisation. Cette garantie est étendue uniquement à l'acheteur original chez un détaillant autorisé et n'est pas transférable. Le reçu original doit être disponible pour exercer la garantie.

APPLICATION	Crystalplant® Baignoires. Blanc.	Crystalplant® Plan-lavabos, lavabos. Blanc.	Bases de douche	Finis de couleur Crystalplant® baignoires, plan-lavabos et lavabos.	Mobilier de salle de bain et accessoires.	Siège de toilette et électronique.	Toilette, plan-lavabo et lavabos en porcelaine.
Résidentielle*	25 ans	10 ans	5 ans	2 ans	2 ans	1 an	5 ans
Commercial	5 ans	2 ans	2 ans	2 ans	1 an	1 an	2 ans

*Également valide pour les applications résidentielles à familles multiples.

Cette garantie est valide et sujette aux conditions suivantes :

- Valable à partir du moment où le produit a été livré.
- Une installation appropriée a été effectuée sur un sol de niveau.
- Inspection pré-installation du produit.
- Vérification de l'installation pour les fuites d'eau et le bon drainage.
- Entretien et nettoyage du produit selon les instructions fournies.

EXCLUSIONS DE LA GARANTIE

La garantie n'est pas valide dans les cas suivants :

- L'installation de tout produit StoneTouch par un professionnel non accrédité.
- Les instructions d'utilisation et d'installation énoncées ici ne sont pas observées.
- Un produit déformé ou défectueux est installé sans l'inspection préalable obligatoire.
- Les dommages sont causés par des catastrophes, telles que les incendies, les catastrophes naturelles, y compris les inondations, les tremblements de terre, etc.
- Le produit est modifié ou personnalisé par l'installateur ou l'utilisateur sans l'autorisation du fabricant.
- Les dommages accidentels surviennent en raison de collisions ou d'une utilisation incorrecte.
- Les dommages ou pertes résultant de tout accident, utilisation abusive, mauvaise utilisation, négligence, ou mauvais entretien du produit.
- Les dommages ou pertes résultant de sédiments ou de matières étrangères contenues dans un système d'eau.
- Les dommages ou pertes résultant de surtensions électriques ou de coups de foudre ou d'autres actes que le produit n'est pas spécifié pour tolérer.
- Les dommages ou pertes résultant de l'usure normale et habituelle du produit, tels que la réduction de l'éclat, les rayures ou la décoloration au fil du temps en raison de l'utilisation, des pratiques de nettoyage, de l'eau ou des conditions atmosphériques, y compris, mais sans s'y limiter, l'utilisation d'eau de Javel, de nettoyeurs alcalins, acides, à sec (en poudre) ou tout autre nettoyeur abrasif ou l'utilisation de tampons à récurer métalliques ou en nylon.
- L'utilisation du produit d'une manière incompatible avec les instructions du produit / manuel du propriétaire.

LIMITATIONS

Cette garantie ne couvre pas les frais de main-d'œuvre et d'expédition, ni les dommages encourus lors de l'installation, du retrait, de la réinstallation, de la réparation ou du remplacement de tout produit ou pièce StoneTouch Bath. Elle exclut également tous dommages indirects ou consécutifs, dépenses, pertes, directs ou indirects, découlant de toute cause que ce soit.

Cette garantie est étendue uniquement à l'acheteur original chez un détaillant autorisé et n'est pas transférable.

Le reçu original doit être disponible pour exercer la garantie.

PROCESSUS DE RÉCLAMATION DE GARANTIE

Veuillez soumettre la facture/le reçu ainsi que les instructions d'installation au point de vente de référence en cas de réclamation de garantie. Pour exercer la garantie, une preuve d'achat, telle qu'une copie de la facture, doit être mise à disposition de notre centre de distribution.

Selon la complexité du produit défectueux, une inspection peut être requise avant d'approuver la réclamation de garantie. Pour obtenir du soutien en lien avec la garantie, veuillez contacter le service clientèle local de StoneTouch. Ce document de garantie est fourni pour définir les termes et conditions des garanties des produits StoneTouch Bath. Il est recommandé de lire attentivement et de comprendre ces termes avant d'effectuer un achat.

Note : Cette garantie n'affecte pas les droits légaux de l'acheteur.





Distributed by
Distribué par

A+D WATERS

ad-waters.com

1 888 ADW-9336

STONE/TOUCH